
## How to Solve Terminal Issue





## **How to Solve Terminal Issue**

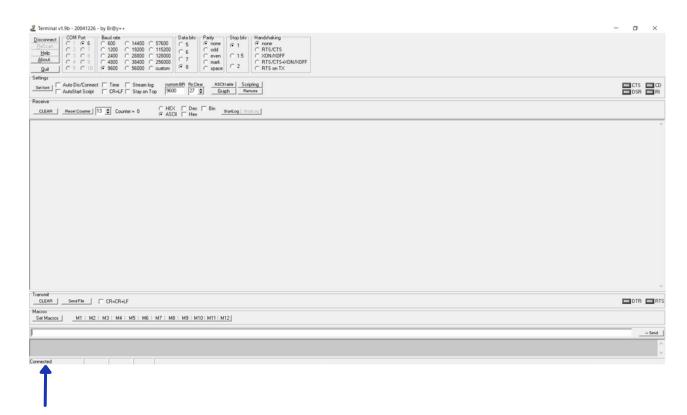

Step1: Go to Terminal Software and check Weight Reading is there or not. Next Check if it is connected or showing error.

Step2: Meanwhile check if Terminal software is opened multiple times, This also cause problem in weight reading.

